

# DENON®

## RCD-M41

CD RECEIVER

# Quick Start Guide

Guide de démarrage rapide / Guía de inicio rápido

## Read Me First....

Lisez-moi en premier.... / Lea esto primero....

ENGLISH

FRANÇAIS

ESPAÑOL

# Welcome

Thank you for choosing a Denon CD receiver. This guide provides step-by-step instructions for setting up your CD receiver.


 







 

**Please do not return this unit to the store – call for assistance. If you need help... :**

If you need additional help in solving problems, contact Denon customer service in your area.


 
For details, see the Denon homepage. [www.denon.com](http://www.denon.com)

# Before You Begin

## What's In the Box

Quick Start Guide		CD receiver	
Owner's Manual		Power cord	
Safety Instructions		FM indoor antenna	
Notes on radio		AM loop antenna	
Warranty (for North America model only)		Remote control unit	
		R03/AAA batteries	

## Required for Setup


 Speaker systems	 Speaker cables
--	---



- These drawings are for illustrative purposes only and may not represent the actual product(s).

# 1 Connection


- 1 Connect the left and right speakers to the RCD-M41.

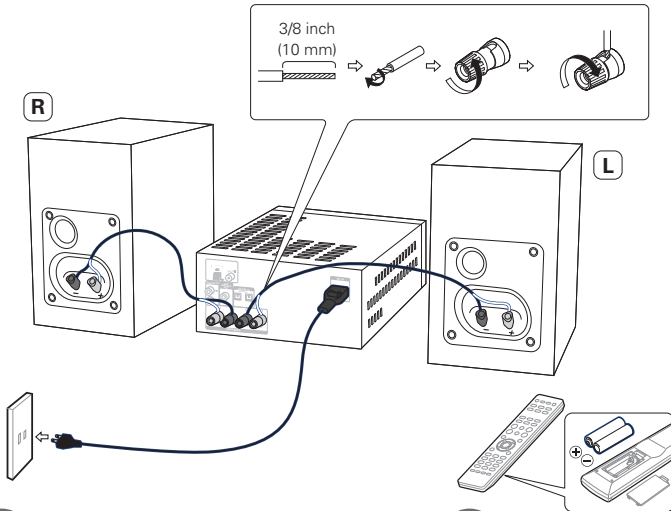

- 2 Connect the power cord from the RCD-M41 to a power outlet.

- 3 Insert the batteries into the remote.



## Connecting a FM/AM antenna

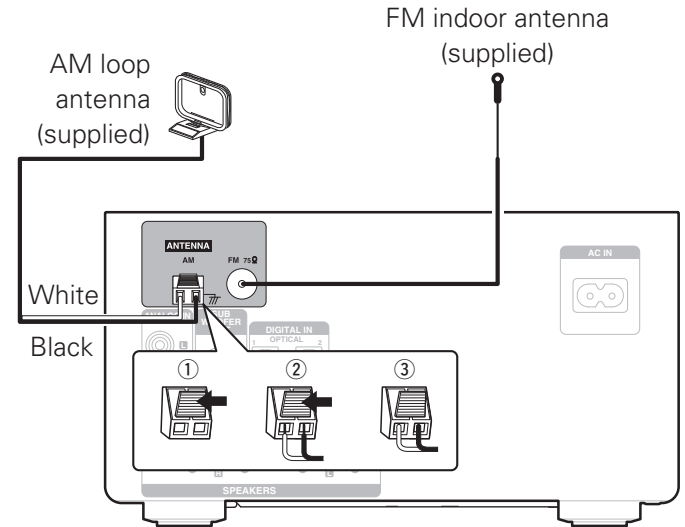

- See “AM loop antenna assembly” on the next page for instructions on how to assemble the AM loop antenna.

## ❑ AM loop antenna assembly

- 1** Put the stand section through the bottom of the loop antenna from the rear and bend it forward.
- 2** Insert the projecting part into the square hole in the stand.

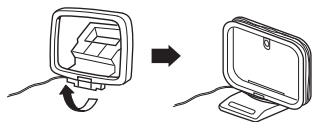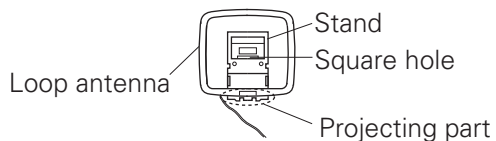

## **2** Enjoying your music!

### ❑ Play a CD

- 1** Press **CD** to switch the input source to “DISC”.
- 2** **Insert a disc.**  
Playback starts.
  - Press ▲ on the main unit to open/close the disc tray.



- You can set whether to automatically play CDs. For details, see the included Owner’s Manual.

## ❑ Listening to FM/AM broadcasts

### 1 Press **TUNER** to select the reception band.

- FM AUTO: When listening to an FM broadcast.
- FM MONO: If the signal is weak and stable stereo reception is not possible, select “FM MONO” to receive in monaural.
- AM: When listening to an AM broadcast.

### 2 Use **TUNE +** or **TUNE –** to select the station you want listen to.

## ❑ Listening to preset FM stations (Auto Preset)

This unit can be preset with a total of 40 FM broadcast stations.

### 1 Press **SETUP** during FM reception. “SETUP” menu appears on the display.

### 2 Use **△▽** and **ENTER** to select “TUNER SETUP” - “FM AUTO PRESET”, then press **ENTER**.

The unit starts to tune in to radio stations automatically and preset them.

### 3 Use **CHANNEL –** or **CHANNEL +** to select the preset number.

## ❑ Enjoying music using Bluetooth

1


**Press Bluetooth to switch the input source to “Bluetooth”.**

When using for the first time, the unit will go into the pairing mode automatically and “Pairing” will appear on the display of the unit.



2


**Activate the Bluetooth settings on your mobile device.**

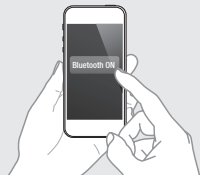

3


**Select “Denon RCD-M41” from the Bluetooth device list on your mobile device.**

- Enter “0000” when the password is requested on the screen of the Bluetooth device.

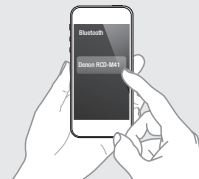

4

**Play music using any app on your device.**

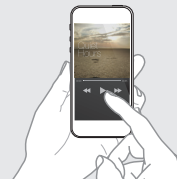


To reconnect a previously paired Bluetooth device, Start at step 2.

# Owner's Manual


Please reference to the Owner's Manual for more details about the setup and operation of the CD receiver and its features.

## ❑ Online Version

Enter the following URL into your web browser:  
[manuals.denon.com/RCDM41/NA/EN/](http://manuals.denon.com/RCDM41/NA/EN/)

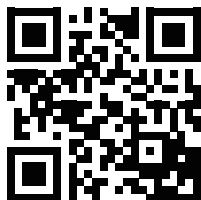

Online Manual

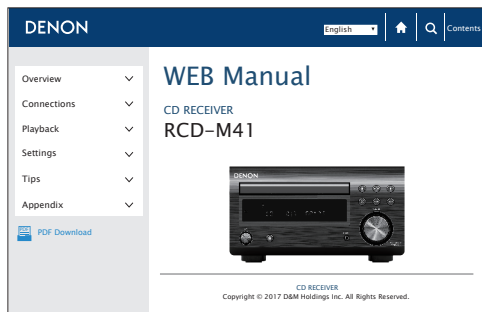


## ❑ Printable Version

Access the print version of the owner's manual from the included CD-ROM or select the "PDF Download" link from the Online Version.

1

**Insert the disc into your PC.**

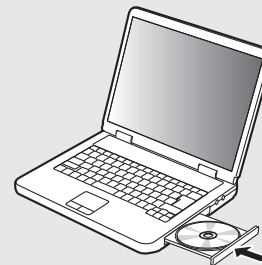

2

**Follow the screen or double click on the PDF file.**

**DENON®**

[www.denon.com](http://www.denon.com)

Printed in Vietnam 5411 11538 00AD  
Copyright © 2017 D&M Holdings Inc. All Rights Reserved.